


NO-DRILL BRACKET PART# GM15EL
COMPONENT BREAKDOWN

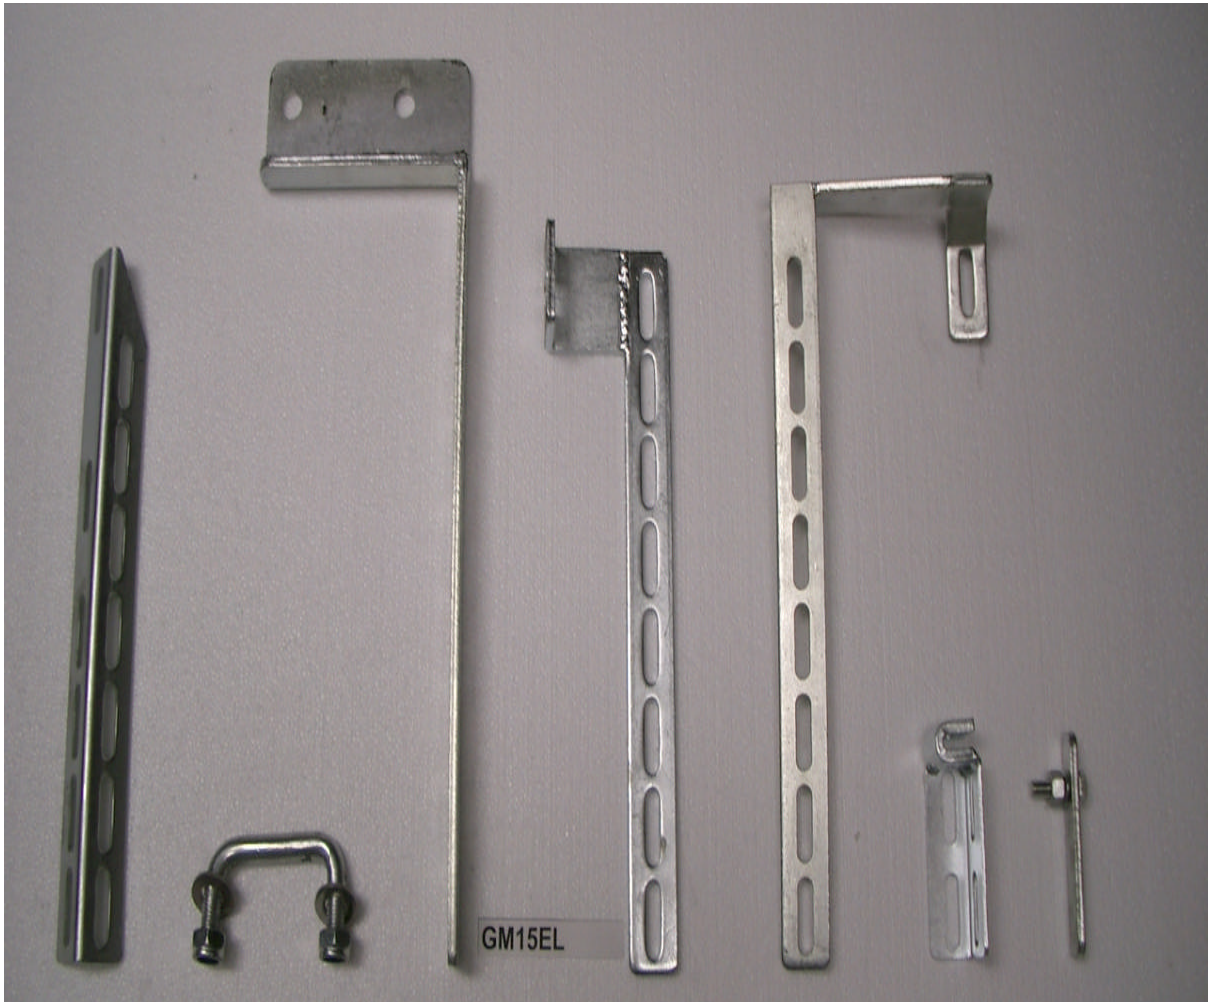

#1
6 pcs

#2
2 pcs

#3
2 pcs

#4
2 pcs

#5
2 pcs

#6
6 pcs

#7
2 pcs

PINCH WELD BRACKET SPECIAL INSTRUCTIONS



Before installing the pinch weld bracket on the vehicle, please follow these instructions:

1. Install a nut on the bolt, tightened down halfway through the length of the bolt thread.
2. Install a lock washer after the nut.
3. Tighten down the bolt-nut-lock washer assembly onto the pinch weld bracket. Make sure that the lock washer does not fall off the bolt.
4. Slip the pinch weld bracket onto the proper pinch weld location. Tighten down the bolt to hold the bracket in place. Once the bracket is sufficiently tightened down on the pinch weld, tighten down the nut towards the pinch weld thereby compressing the lock washer. The lock washer is necessary to prevent the assembly from loosening up.

NO-DRILL BRACKET PART# GM15EL 00-06 CHEVY/GMC SILVERADO/SIERRA 2, 3, 4 (SUICIDE) DOOR EXTRA CAB LONG BED

NOTE: All instructions are for the driver side unless otherwise specified. For the passenger side, orientation of the main frame bracket will be reversed and sequence of the main frame, pinch weld, and extension brackets will also be reversed for proper alignment.)

A. FRONT BRACKET



PICTURE# 1



PICTURE# 2



PICTURE# 3

1. Look for 2 existing holes on the bottom part of the front chassis located after the stopper for the emergency brake cable housing (Picture# 1&3). Slip u-bolt, Bracket# 2, in from the inner channel of the chassis (Picture# 1). Tighten down Bracket# 3 onto the u-bolt using 2 washers and 2 self-locking nuts (Picture#2).
2. Install Bracket# 6 on the pinch weld area, making sure that Bracket# 3 is perpendicular to the body of the truck (Picture# 3). Follow special instructions for pinch weld bracket installation.
3. Align Bracket# 1 with Bracket# 3&6. Tighten down with 2 bolts, 4 washers, 2 lock washers, and 2 nuts (Picture# 3).

B. MIDDLE BRACKET



PICTURE# 1



PICTURE# 2

1. Look for the chasis bushing assembly located towards the middle of the chasis between the 2 doors (Picture# 1). Remove the original bolt and insert Bracket# 4 then tighten down the assembly using the original bolt (Picture# 1).
2. Install Bracket# 6 on the pinch weld area, making sure that Bracket# 4 is perpendicular to the body of the truck (Picture# 2).
3. Align Bracket# 1 with Bracket# 4&6. Tighten down with 2 bolts, 4 washers, 2 lock washers, and 2 nuts (Picture# 2).

C. REAR BRACKET



PICTURE# 1

1. Locate existing hole on diagonal plate attached to the chassis towards the rear of the cab (Picture# 1). Tighten down Bracket# 5 using the nut plate, Bracket# 7 or the regular bolt, washer, lock washer, and nut.
2. Install Bracket# 7 on the pinch weld area, making sure that Bracket# 5 is perpendicular to the body of the truck (same as in front bracket).
3. Align Bracket# 1 with Bracket# 5&6. Tighten down with 2 bolts, 4 washers, 2 lock washers, and 2nuts (same as in front bracket).